



DAG-5LX

Maintenance Manual




YANGSAN MACHINERY



DAG-5LX_Disassembly



1) 제품 확인

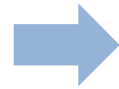


2) WHEEL GUARD BOLT 분해



3) WHEEL GUARD 분해 모습



 4) WHEEL NUT FLANGE 분해




5) WHEEL HOLDER FLANGE 분해




6) HANDLE BODY 분해



DAG-5LX_Disassembly

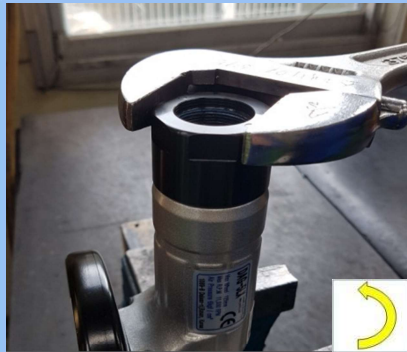

 7) HANDLE BODY 분해 모습



8) CASING FRONT COVER 분해



9) CASING FRONT COVER 분해
(IMPACT WRENCH 사용)



10) WHEEL NUT FLANGE 분해



11) SNAP RING 분해



 
18) SPINDLE BEARING(6203ZZ)
분해



DAG-5LX_Disassembly



13) DRIVEN GEAR 분해



14) SPINDLE DODULE 분해 모습



15) MODULE 분해 모습



16) DRIVING GEAR 분해



17) DRIVING GEAR 분해 모습



 
18) CYLINDER, FRONT PLATE 분해



DAG-5LX_Disassembly




19) MOTOR MODULE 분해 모습




20) REAR PLATE 분해



21) MOTOR MODULE 분해 모습

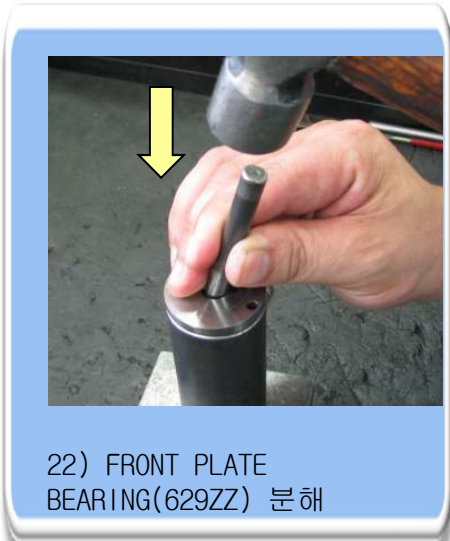

 22) FRONT PLATE BEARING(629ZZ) 분해



23) REAR PLATE BEARING(629ZZ) 분해



 
24) MOTOR MODLE 전체 분해 모습



DAG-5LX_Disassembly



25) 전체 분해 모습




26) REAR PLATE 조립



27) REAR PLATE, ROTOR 간격 조정



 28) CYLINDER, FRONT PALTE, BEARING(629ZZ) 조립




29) SPACER, KEY, DRIVING GEAR 조립




30) MOTOR MODULE 조립
-> 케이싱에 모터 삽입




DAG-5LX_Disassembly

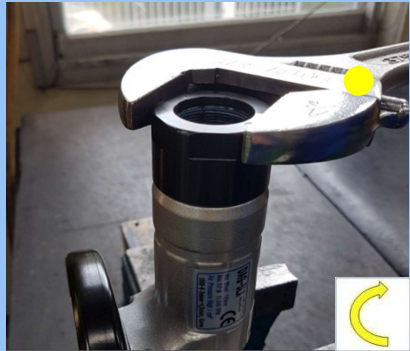

 31) HADLE BODY MODULE 조립



 31) HADLE BODY MODULE 조립




32) TEST



DAG-5LX_Disassembly(HANDLE BODY)



 
1) BOLT 분해



2) HANDLE BODY 분해




3) CONNECTOR 분해

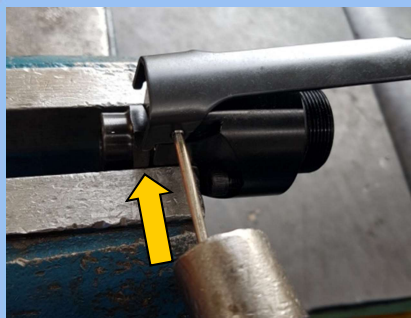

4) SPRING PIN 분해



5) HANDLE BODY 분해 모습

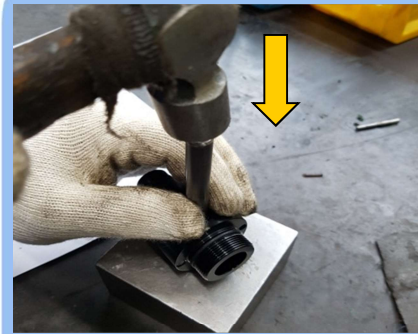


6) STEEL BALL 조립
(BALL PRESSING)



DAG-5LX_Disassembly(HANDLE BODY)



 7) SPRING, VALVE PLUG 삽입




8) VALVE PLUG 조립



9) 조립 순서 확인(아래쪽)



 10) LOCK OFF THROTTLE 방향



11) SPRING PIN 조립



12) LOCK OFF SPRING +
LOCK OFF THROTTLE 조립



DAG-5LX_Disassembly(HANDLE BODY)



13) HANDLE BODY + SPRING PIN
조립